

K10 Surface Unit Operation:

The K10 Surface Unit has 3 LCD displays on the face.

To start sampling, flip the switch to the ON position. The gauge will sample at the interval it was last programmed at (See software manual for programming instructions).

When the device is in the OFF position it can be attached to a PC via USB for programming and downloading.

K10 Surface Unit Maintenance:

Replacing the K10 Surface Unit battery pack. When reordering the battery pack use Kuster part number 18500-540.

1. Remove the red cover from the gauge.




2. Remove two screws shown on the picture below




3. Pull out electronics assembly carefully prying it out.



4. Flip the assembly over, lay it down on isolating mat and remove two screws from the bottom plate.

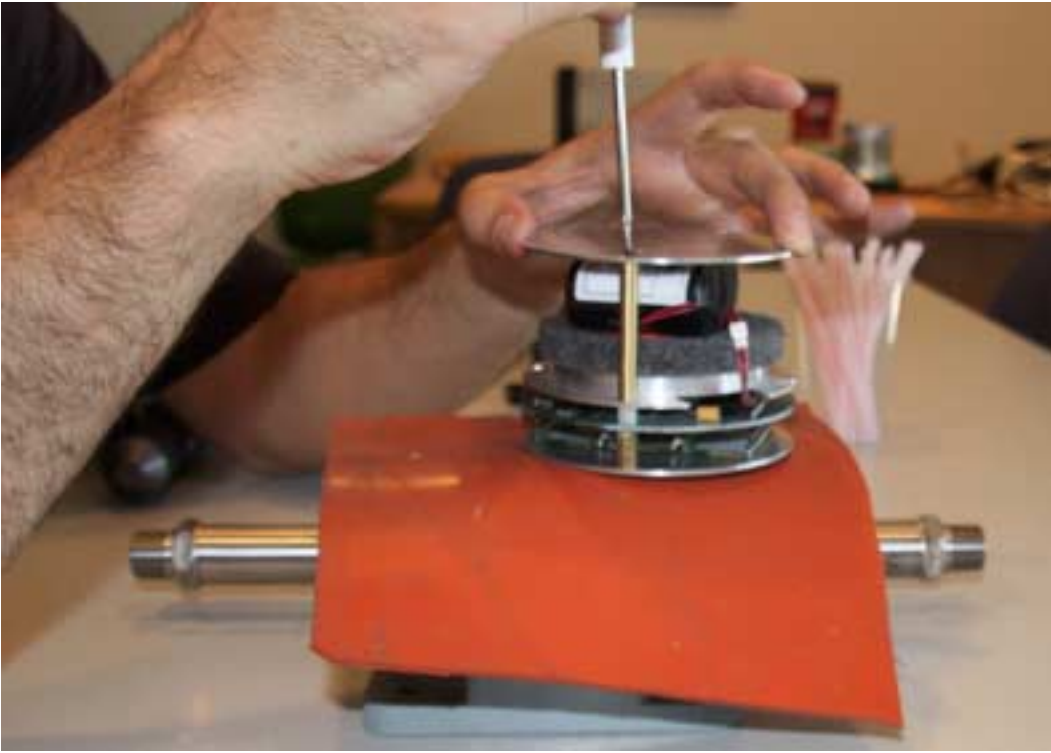

5. Disconnect white mini-con and remove battery pack from the bottom plate

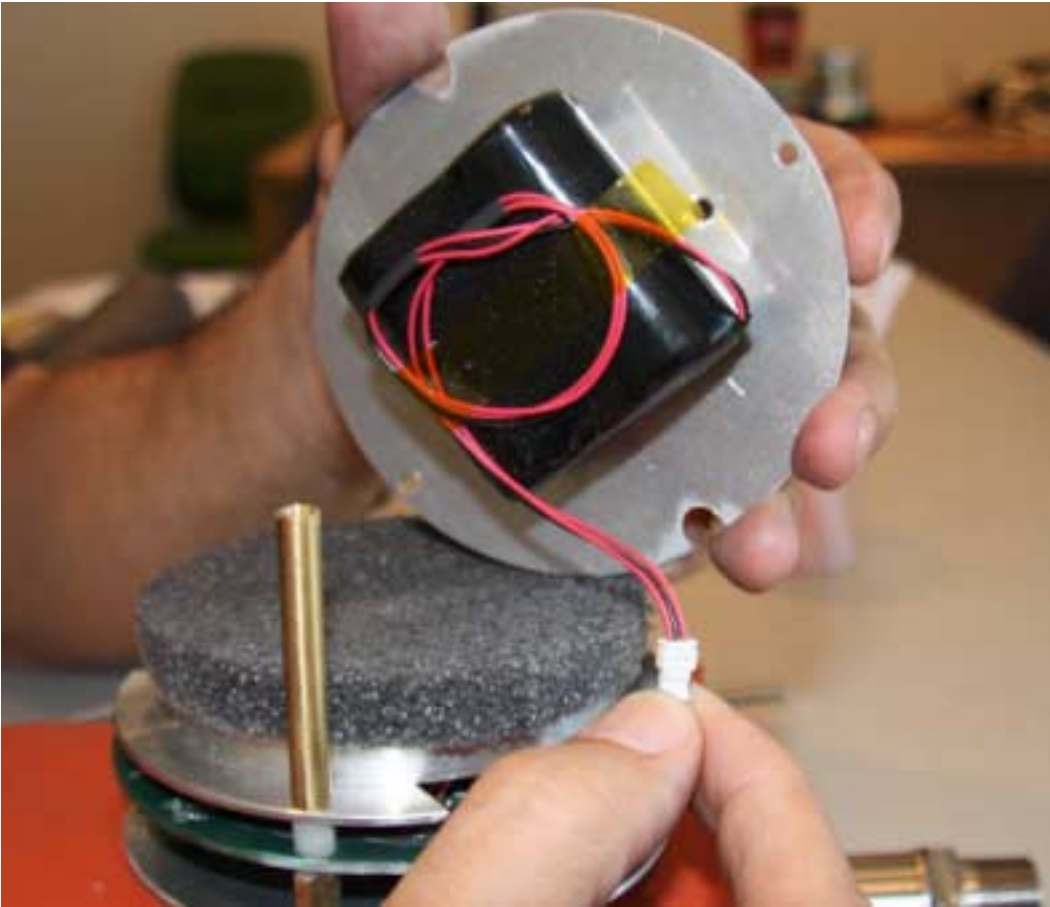

6. Replace battery pack and assemble the gauge in the reverse order.